



PRODUCT FEATURES

- High quality 1400 lumen white LED, 6500k
- Hard anodized die cast matte aluminium body
- Tactical rubberised tail switch
- Useful pocket clip and wrist strap included
- Flawless smooth reflector for long distance beam
- 4 light modes and 8Hz defence strobe
- IP68 dust and waterproof - 1m submersible
- Impact resistant to 2m
- High quality 2600mAh 18650 Li-ion battery included
- Built-in concealed USB-C charging port
- Battery level and charging indicator LED
- Circuit Protection prevents battery from over-charging or over-discharging
- Fast 1A USB-C charging - 2.5 hour charge time
- High quality 0.5m USB-C charging cable included
- Also works with 2 x CR123A batteries (not included)

BATTERY - 3.6v 2600mAh 18650 Li-ion (included) / or 2 x CR123A batteries (not included)

WEIGHT - 157g (with li-ion battery) / 109g (without battery)

DIMENSIONS - 140 x Ø 30x Ø 25mm

ADVICE & IMPORTANT INFORMATION!

- Do not look directly at LEDs.
- Do not operate in direct sunlight or extreme temperature conditions (below -10°C or above 40°C).
- LEDs can become warm/hot when switched on; DO NOT touch and NEVER place face down on any surface – risk of fire! Even once the device has been switched off, DO NOT place face down as the LED and Lens can stay hot/warm for a while.
- Do not use the device if there is any visible damage.
- Do not use the device in the immediate vicinity of flammable materials or gases.
- Take care when charging, check the charging output on the charging source you are using and DO NOT exceed the stated Max charging input or damage may occur to the battery and may void the warranty.
- The rechargeable battery will reach full performance after a few complete charging and discharging cycles.
- To keep the rechargeable battery in optimum condition, it should be recharged every 3-6 months, especially if it is not being used for a long period of time.
- Always fully charge rechargeable batteries before storage and if the rechargeable battery can be removed, this is advised to avoid battery depletion and avoids the risk of a battery leaking.
- Always protect lithium batteries from heat, intense sunlight, fire, water and moisture – danger of explosion!
- If a battery is damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact occurs, rinse thoroughly with water. If irritation persists, seek medical advice. Seek immediate medical

ANSI FL1 Standard



	1400 Lumen	180 M	2.5 H
HIGH	1400 Lumen	180 M	2.5 H
MEDIUM	700 Lumen	100 M	4.5 H
LOW	140 Lumen	25 M	12 H
ECO	40 Lumen	10 M	23 H

OPERATING INSTRUCTIONS

SWITCH SEQUENCE:- Eco > Off > Low > Off > Medium > Off > High > Off > Strobe > Off

Next press ON after 10 seconds of switching OFF will go to the next MODE. If left Off for 10+ seconds, it will return to ECO mode.

RECHARGING

- Only use a 5V USB-C charging cable (Max 1A).
- Twist the cross-hatched part of the body by the USB symbol to reveal charge port, then plug the USB-C end of the cable in.
- Plug the USB-A end of the cable into a USB charging source (do not exceed 5V-1A charging input or damage may occur. Please do not use "Fast Chargers" as this can over-load the battery).
- Green Flash indicates charging, Solid Green indicates fully charged.
- Charge Time: 2.5 hours
- Ensure the charge port cover is securely screwed back in place.

(THIS PRODUCT CAN NOT BE USED WHILE RECHARGING)

Warranty void if not used with the specified cable & max charge input

CHARGING INDICATOR

- Green Flashing = charging
- Solid Green = fully charged

BATTERY LEVEL INDICATOR

NOTE: Battery indicator only lights up for 10 seconds when the flashlight is first turned on.

- Green = 65% - 100%
- Orange = 30% - 65%
- Red = 5% - 30%
- Red Flashing = less than 5%

- assistance if lithium battery fluid comes into contact with the eyes.
- Children under 12 years of age should only use the product under adult supervision.
- Do not disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered under the warranty.
- Take care not to let lenses come into contact with hard/sharp objects, damage/scratches to lenses will affect light output.
- Do not use the product in the immediate vicinity of flammable materials or gases.
- Before cleaning the product, disconnect the charge cable. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.
- This product has a 1 year standard warranty (or extended to 2 years once registered online at WWW.UNILITE.CO.UK/WARRANTY) against manufacturing faults and defects. It does not cover normal wear and tear, modifications, accidental damage or poor maintenance. Unilite standard warranty does not cover disposable batteries that have leaked or the use of incorrect chargers and cables that can damage rechargeable batteries.
- Do not dispose of this device in normal household waste. It must be disposed of via an authorised electrical appliance disposal centre or at your local waste disposal unit.
- Please re-use or recycle packaging responsibly.
- Keep these instructions for future reference or for subsequent possessors.